

BRAKE PIPE COATING REMOVAL TOOL

Adjustable 3-16mm



Adjustable for pipe diameters: 3 - 16mm (1/8" - 5/8")

This is **NOT** a pipe cutter, instead this tool allows you to remove **ONLY** the protective nylon coating (seen in particular VAG and GM models) to be removed prior to flaring the brake pipe.

Prevents 'bad flares' which occur when brake pipe is flared with coating on which can lead to leakage.

462 004 Brake pipe coating removal tool